



Airborne Sensor, LLC.
9 Beach Rd.
Hingham, MA 02043
781-799-5148

Guide to Using Spacers with your Eagle360 Camera Pod Hero3 Cameras

The camera bays of the Eagle360 are sized to fit Hero3 cameras with or without a Battery BacPac. Because for either configuration there will be extra space in the camera bay when you insert the black wedge, we have made sets of spacers to help with these configurations.

The larger spacer is for just the camera body and is .850 inches thick, and the thinner spacers for the camera with the Battery Bacpac are .400 inches thick. Here is the procedure for installing them:

- 1) On the back of the spacers you will see double-sided tape, and there is a diagonal slice in the backing: just peel the two parts of backing off.
- 2) Position the spacer vertically on the rear wall of the bay, roughly in the middle, and just be sure the top of the spacer is at, or below, the top of the rear wall of the bay. It should look like this:






Airborne Sensor, LLC.
9 Beach Rd.
Hingham, MA 02043
781-799-5148

3) Now press the spacer against the rear wall, to make sure the adhesive on the double-sided tape can take hold.

4) Finally, insert the camera and put the wedge between the camera and the spacer. It should look like this:

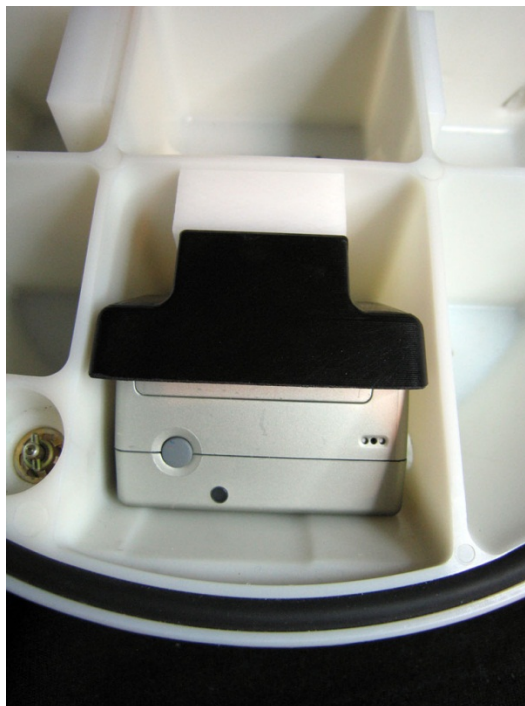

5) Attach the pod to your aircraft, and go!